MOTOROLA AU EN

Accessory Camera Unit

MBP28BU

Quick Start Guide

1. Getting started
2. Help
3. General Information

This Quick Start Guide provides all the information you need to get started. If you need more detailed instructions, please go to www.motorola.com to download a PDF of the main product's User's Guide.
Please consider the environment before printing.

Box Contents

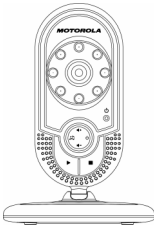

Camera Unit

Power adapter

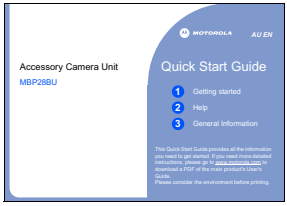

Quick Start Guide

The accessory camera unit can be paired as an additional camera unit of Motorola model MBP28 or MBP701.

IMPORTANT

Accessory camera unit only – requires a MBP28 parent unit or a MBP701 digital photo frame to operate.

1 Getting started

AU EN

Step 1. Connecting the accessory camera unit

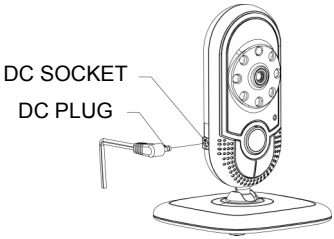

1. Insert the DC plug of the power adapter with the smaller DC plug into the DC socket in the side of the camera unit, as shown.

NOTE

Only use the enclosed power adapter (6V DC / 600mA).

2. Connect the other end of the power adapter to a suitable mains socket or power outlet.

IMPORTANT

Use only the power adapter supplied with the product.

Step 2. Registration (Pairing)

To re-register your camera unit, or register a new camera unit, follow the procedure below:

1. Press the OK button of the parent unit to access the main menu.
2. Press the ▲+ button or ▼- button to select REGISTER.
3. Press the OK button to confirm. The parent unit will display Registration mode, and then display Registering... which indicates it has entered the registration mode.
4. Press and hold the 🔊+ button of the camera unit until it emits a beep tone.
5. There will be a beep and the display will show Registered when the registration is successfully completed, and the camera unit will be assigned a baby unit number, which can be checked from the parent unit.

2 Help

For more solutions, see the full Help section in the User's Guide.

If the Camera Unit has lost link with the Parent Unit

- Check the electrical power and check whether the power adapter on the Camera Unit is connected firmly.
- If the Camera Unit is too far away, it may be going out of range, so move the Camera Unit closer to the Parent Unit.
- Reset the units by disconnecting them from the battery and electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Camera Unit and the Parent Unit to synchronize.
- See Step 2. Registration (Pairing), if there is a need to re-register the units.

3 General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Contact Customer Service:

Australia	1300 667 137	New Zealand	0800 567 5000
Email	info@cnpbrands.com.au	Email	helpline@wainhousedist.co.nz

MOTOROLA

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners.

© 2012 Motorola Mobility, Inc. All rights reserved.

Printed in China
Version 2.0